

Installing Unsigned Drivers in Windows 10

The FLEX³PRO driver and the PERET USB driver used by the Betaflex PRO are not digitally signed. The default security settings in Windows 10 may not allow the installation of these drivers.


A Windows 10 update may also cause the FLEX³PRO driver or the PERET USB driver to be automatically replaced by a generic Windows Driver.

To repair the drivers follow the procedure outlined below and described in the video link.
https://www.youtube.com/watch?v=71YAlw7_-kg

1.) Press and hold the SHIFT key and click on Restart as shown below;



2.) Windows will restart with the prompt shown below;

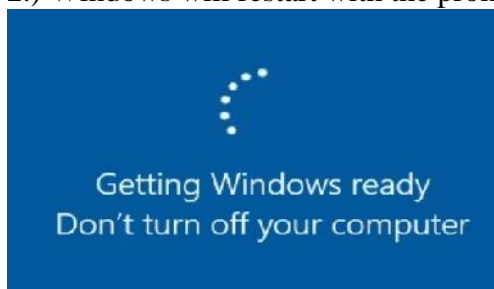


3.) The Option list will open, select Troubleshoot;




4.) Select the Advanced options;




5.) Select Startup Settings;

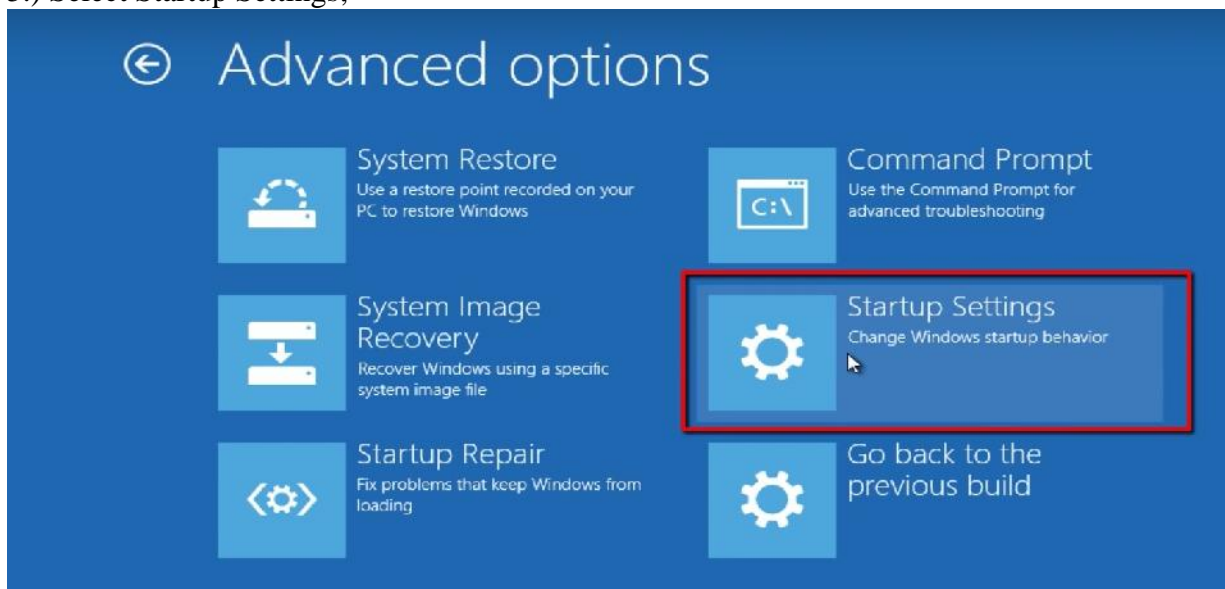

6.) Select Disable Driver signature enforcement and then click on Restart;

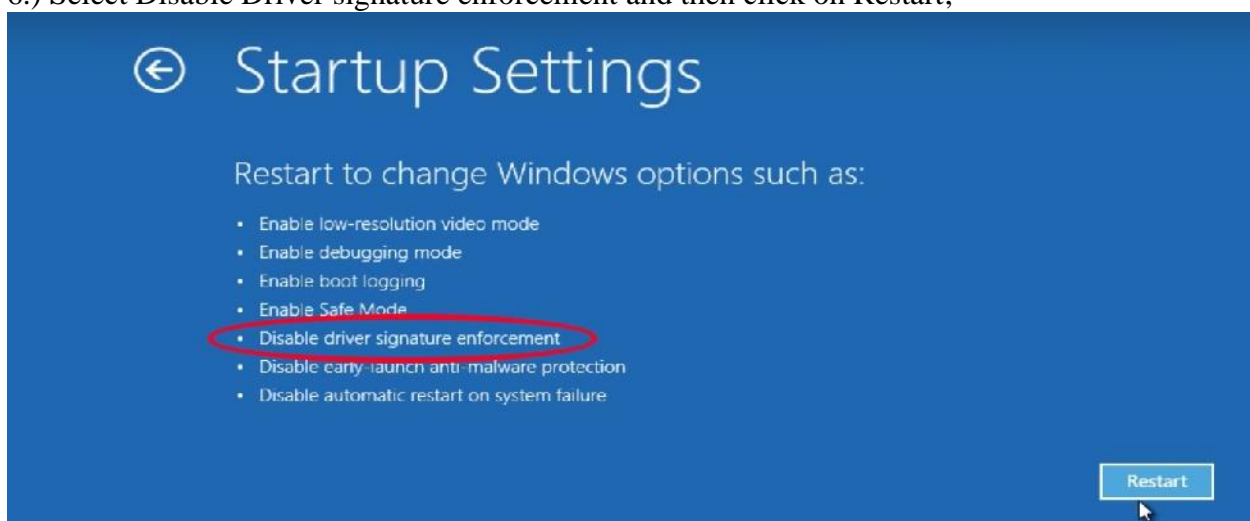

7.) Select Disable driver signature enforcement by press function key F7 or the number 7 key;

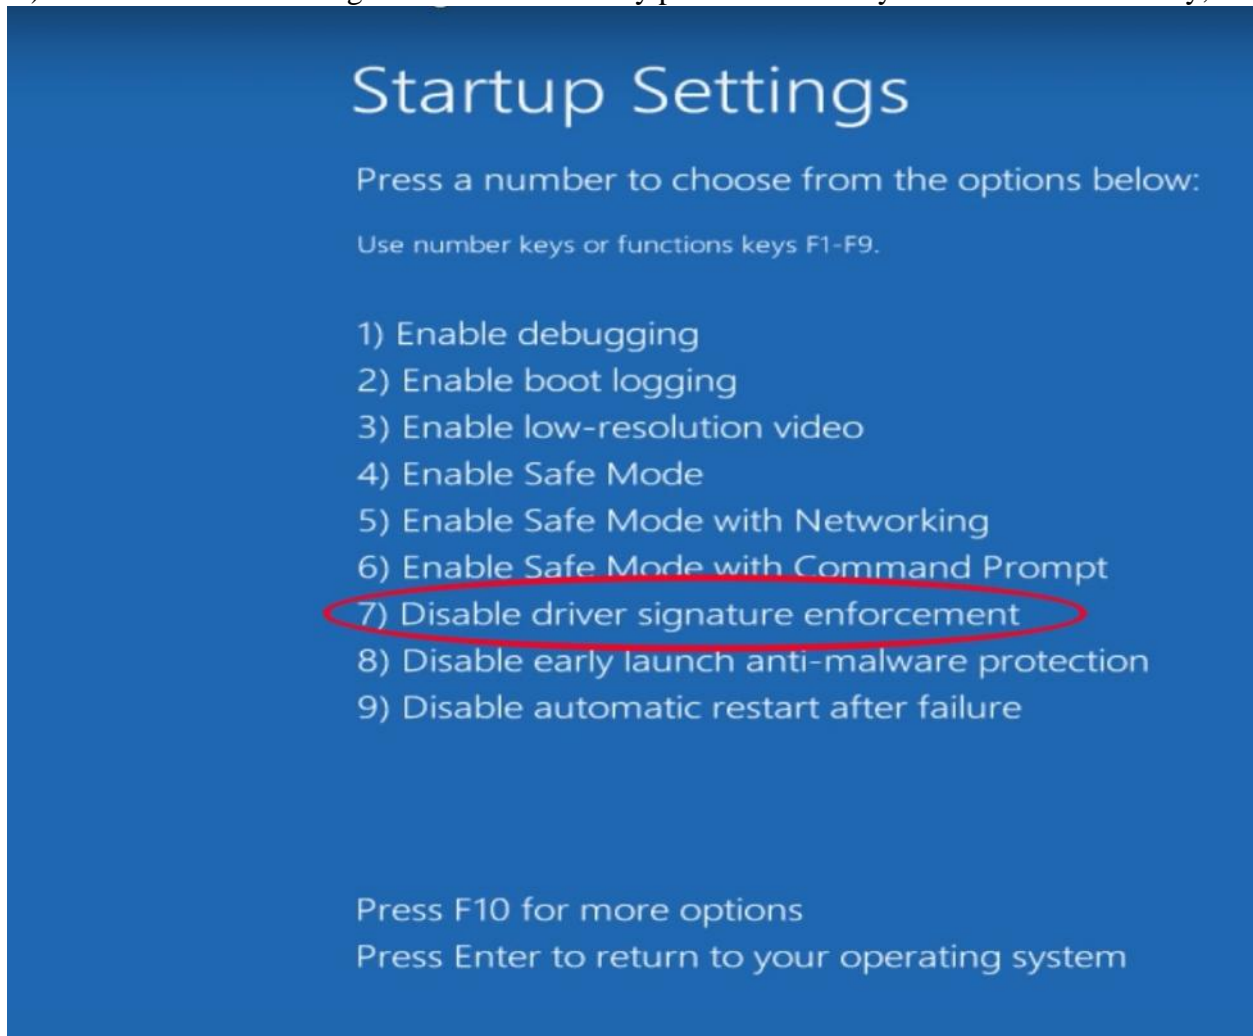

This procedure will allow the Betaflex PRO drivers to be loaded without generating an error message. As the policy has been changed for the entire Windows system, be careful in loading other drivers from other sources as they may do harm to your computer system.