



S4 XPress BETACOLOR DENSITOMETER

Faster Make Ready and Quality Control



Illuminated Red and Green Signal for Visual **STOP** or **GO**

50% BAL

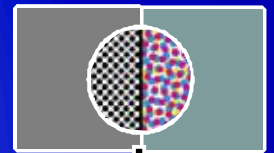

Automatic Gray Balance Control

More than 500,000 Measurements without Charging




Ideal for the 4 color press

FREE 10 DAY TRIAL

ZERO MAINTENANCE

Get on the S4 XPress

Featuring Automatic Gray Balance, Density, Dot Gain, & Trapping

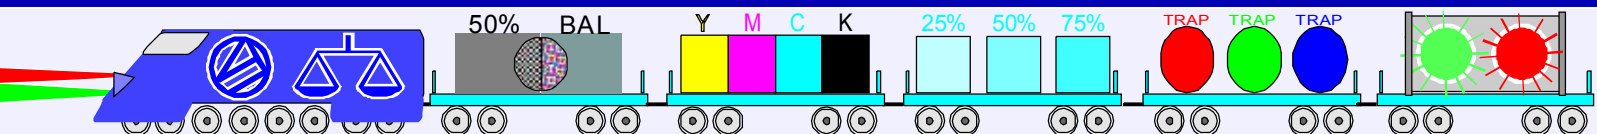


BETA INDUSTRIES
707 COMMERCIAL AVE
CARLSTADT, N.J. 07072 USA

The Quality Control Company For The Future

201-939-2400 800-272-7336

Fax 201-939-7656

www.betascreen.com



BETACOLOR S4 XPRESS

EASY TO USE SOLUTION FOR DIFFICULT PRESS PROBLEMS



Automatically measure Gray Balance, Density, Dot Gain, Trapping Efficiency and Color Sequence without pressing buttons or switching modes

Retractable target sight never touches or damages wet ink

New illuminated **STOP** or **GO** signals guide the operator to a perfect job. Actual readings always appear in the large display



Gray Balance is a vital quality control tool. It is a sensitive indicator of cyan, magenta, and yellow dot gains and their respective solid densities. It can be judged by eye or measured with a densitometer. One Gray Balance measurement is the equivalent of 6 density and dot gain measurements. It is the most efficient method of



OUT OF TOLERANCE

WITHIN TOLERANCE



ZERO MAINTENANCE

No chargers or cables to lose or malfunction



Sequential RGB LED Light Source and PERMA FILTERS Guaranteed for 7 years

Light Source RGB LED's, 45/0 degree geometry
Aperture 3mm standard, 2mm or 1mm optional
Range 0.00 - 2.50D, Dot Area - 1% to 100%
Measuring speed 0.5 seconds, Linearity +/- 1%
Target Recognition Automatic Infrared Detection
LED lights and filters guaranteed for 7 years

Graphical Display 160x80 Pixels, 4 Gray levels
Batteries 2 AA alkaline, >500,000 Measurements
Serial interface USB Polarization Optional
Dimensions 6.9x3x1.9in.(175x76x47mm)
Weight . 12 oz. (335g) High-impact, shielded case
3 year warranty against manufacturing defects

MONEY SAVING BONUS


Add a **BETA COLOR VIEWER**, the world standard for viewing color and a digital **Custom Color Bar** designed to fit your press size with numbered ink keys to match. Reduce waste and increase yield. Call for details on the **PRESS KIT**.

PRESS KIT



S4 XPRESS SYSTEM

SOFTWARE OPTIONS

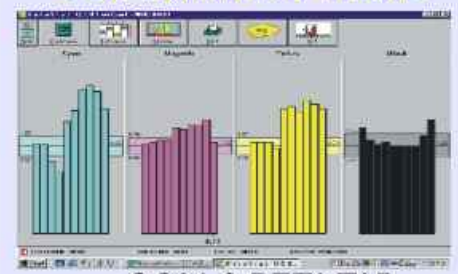

QC01 & BETA TAB

